



Quick Start Guide


Motion MEMS and environmental sensor expansion board for
STM32 Nucleo
(X-NUCLEO-IKS01A3)

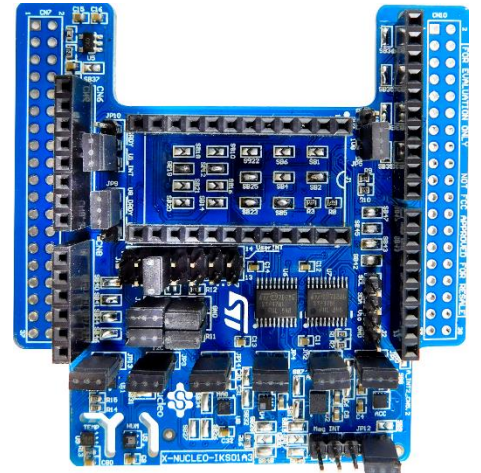

Version 1.0 (February 13, 2019)

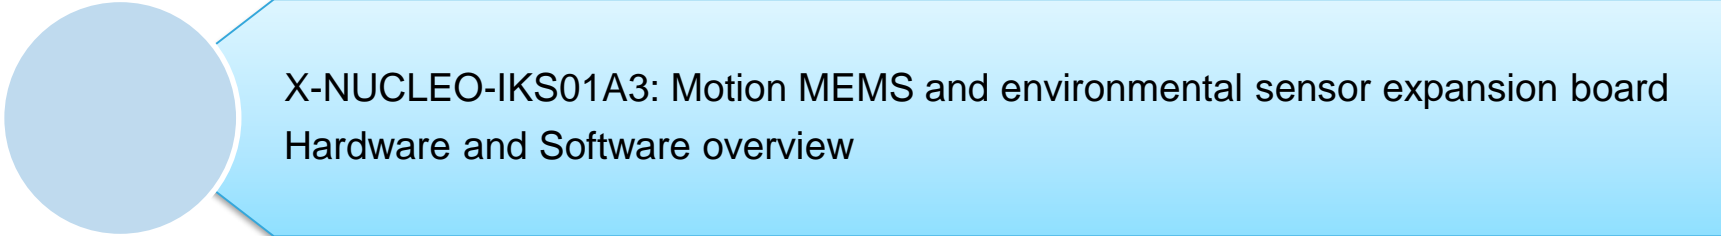

X-NUCLEO-IKS01A3: Motion MEMS and environmental sensor expansion board
Hardware and Software overview



Setup & Demo Examples
Documents & Related Resources



STM32 Open Development Environment: Overview

Motion MEMS and environmental sensor expansion board

Hardware overview (1/2)

3

X-NUCLEO-IKS01A3 Hardware description

- The X-NUCLEO-IKS01A3 is a motion MEMS and environmental sensor evaluation board system.
- It is compatible with the Arduino UNO R3 connector layout, and is designed around ST's latest sensors.

Key products on board

LSM6DSO

MEMS 3D accelerometer ($\pm 2/\pm 4/\pm 8/\pm 16$ g) + 3D gyroscope ($\pm 125/\pm 250/\pm 500/\pm 1000/\pm 2000$ dps)

LIS2DW12

MEMS 3D accelerometer ($\pm 2/\pm 4/\pm 8/\pm 16$ g)

LIS2MDL

MEMS 3D magnetometer (± 50 gauss) +

LPS22HH

MEMS pressure sensor, 260-1260 hPa absolute digital output barometer

HTS221


Capacitive digital relative humidity and temperature

STTS751

Digital Temperature sensor

DIL 24-pin

Socket available for additional MEMS adapters and other sensors (UV index)

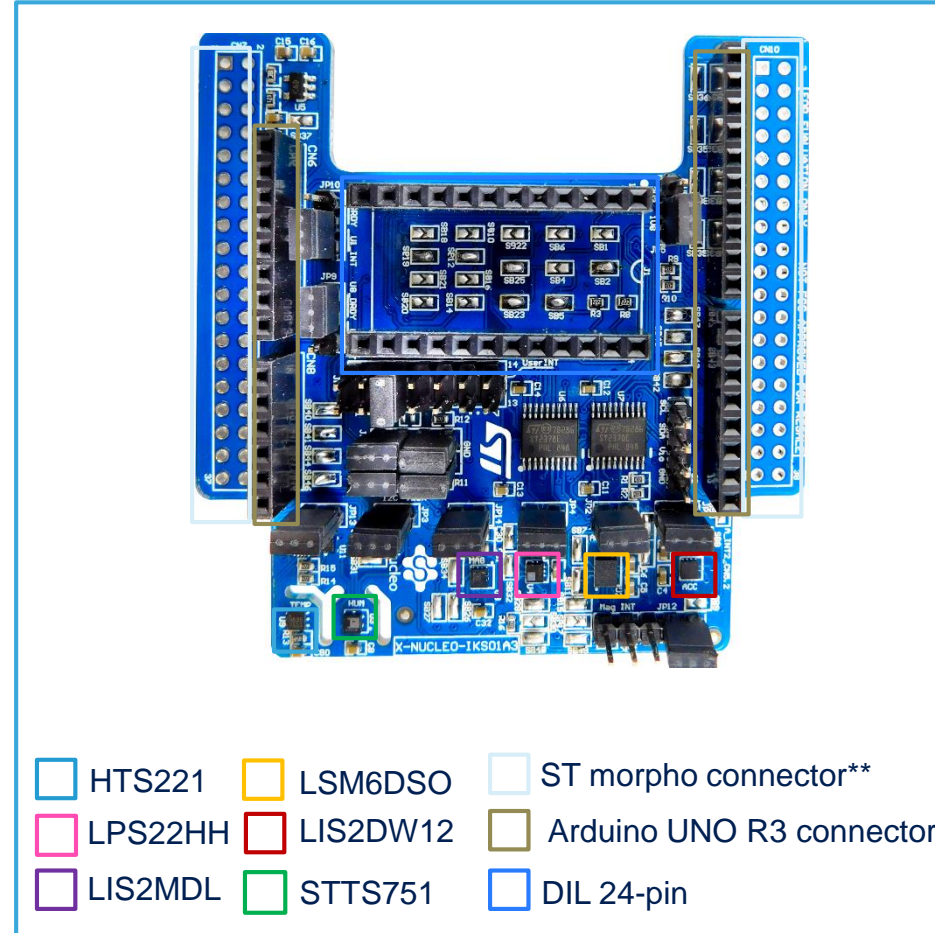

Latest info available at www.st.com
X-NUCLEO-IKS01A3


** Connector for the STM32 Nucleo Board

Motion MEMS and environmental sensor expansion board

Hardware overview (2/2)

Key features

- The X-NUCLEO-IKS01A3 is a motion MEMS and environmental sensor evaluation board system.
- All sensor sensors are connected on a single I²C bus
- Sensor I²C address selection
- Each sensor has separate power supply lines allowing power consumption measurements
- Sensor disconnection (disconnects the I²C bus as well as the power supply)
- Interrupt and DRDY signals from sensors
- DIL24 socket (compatible with STEVAL-MKI***V* MEMS adapter boards)

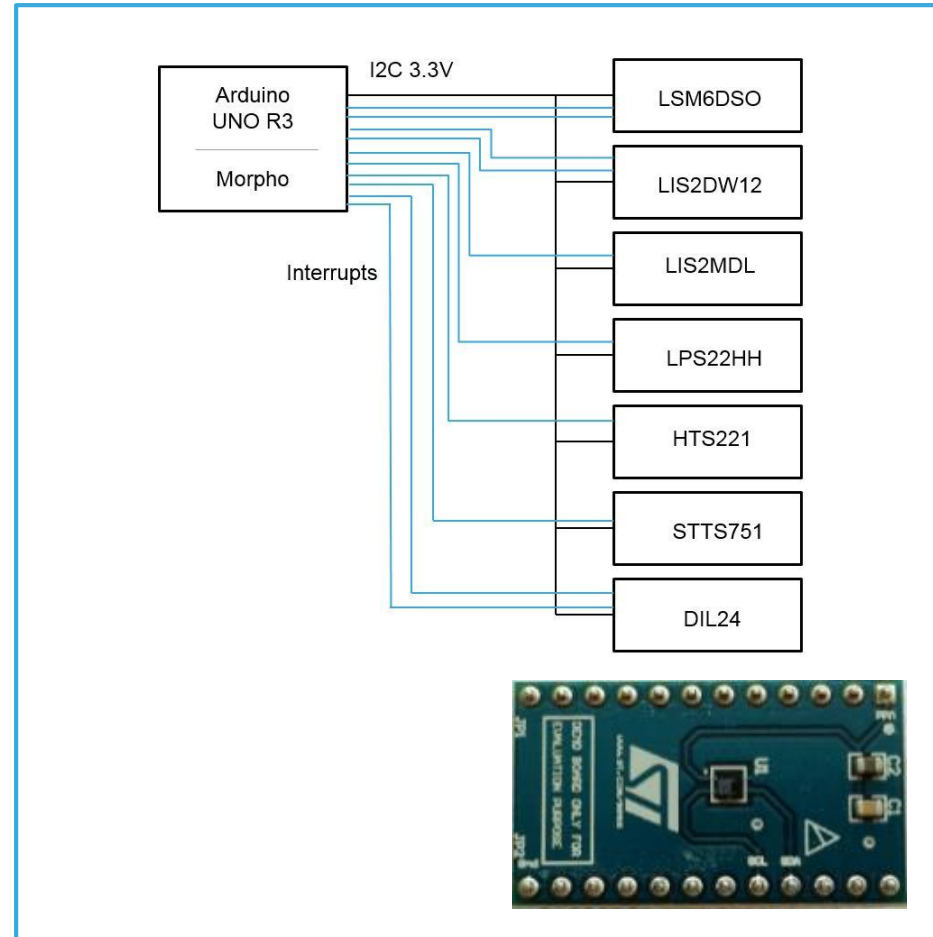

Motion MEMS and environmental sensor expansion board

Software overview (1/2)

5


X-CUBE-MEMS1 Software description

- The X-CUBE-MEMS1 software package is an expansion for STM32Cube, associated with the X-NUCLEO-IKS01A3 expansion board.
- It is compatible with NUCLEO-F401RE, NUCLEO-L053R8, NUCLEO-L152RE or NUCLEO-L476RG


Key features

- Complete software to build applications using environmental sensors (HTS221, LPS22HH and STTS751) and motion sensors (LIS2DW12, LIS2MDL and LSM6DSO)
- Several examples to show the innovative inertial and environmental sensors
- Sample application to transmit real-time sensor data to a PC
- Compatible with the Unicleo-GUI graphical user interface to display sensor data and configure outputs
- Advanced motion libraries with sample applications
- Package compatible with STM32CubeMX, can be downloaded from and installed directly into STM32CubeMX
- Easy portability across different MCU families, thanks to STM32Cube
- Free, user-friendly license terms


Overall Software Architecture

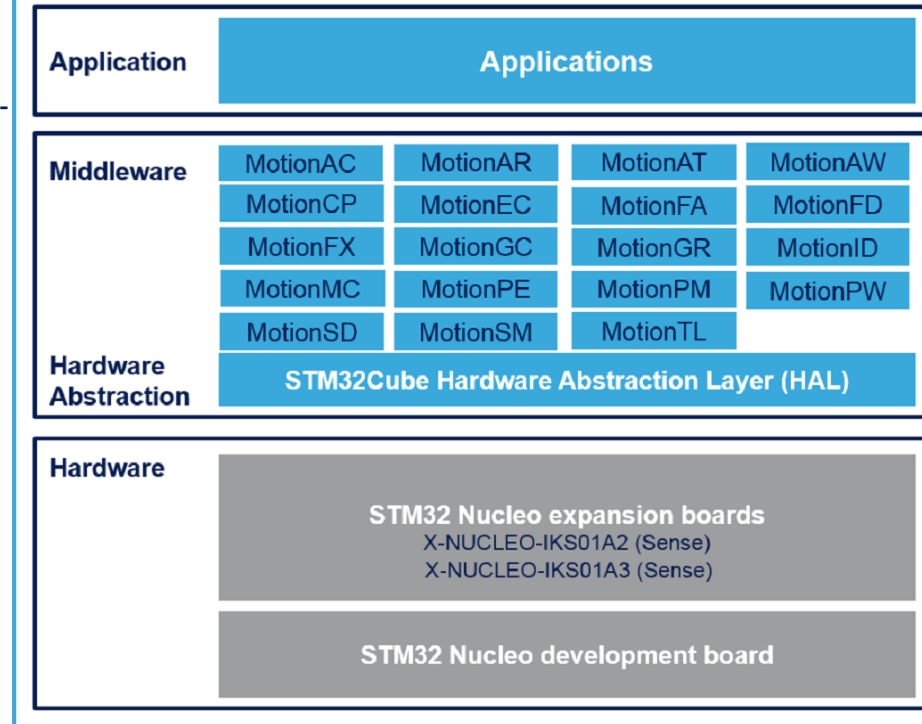

Latest info available at www.st.com
X-CUBE-MEMS1

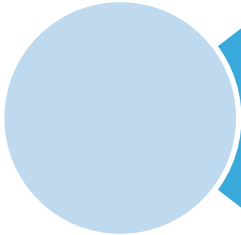

X-NUCLEO-IKS01A3: Motion MEMS and environmental sensor expansion board
Hardware and Software overview

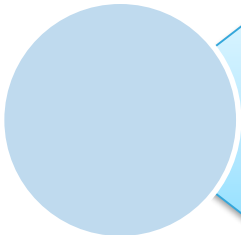

Setup & Demo Examples
Documents & Related Resources



STM32 Open Development Environment: Overview

Setup & demo examples

Hardware prerequisites

7


- 1x Motion MEMS and environmental sensor expansion board (**X-NUCLEO-IKS01A3**)
- 1x STM32 Nucleo development board (**NUCLEO-F401RE** or **NUCLEO-L053R8** or **NUCLEO-L152RE** or **NUCLEO-L476RG**)
- Windows 10/8/7 - Laptop/PC
- 1 x USB type A to mini-B USB cable



NUCLEO-F401RE
NUCLEO-L053R8
NUCLEO-L152RE
NUCLEO-L476RG



Mini USB Cable

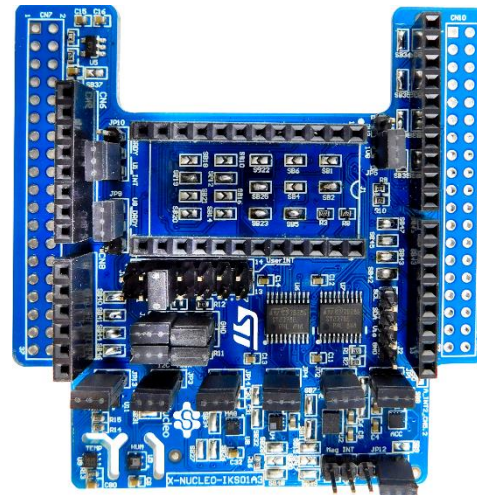

X-NUCLEO-IKS01A3

Setup & demo examples

Software prerequisites


8

- **STSW-LINK008:** ST-LINK/V2-1 USB driver
- **STSW-LINK007:** ST-LINK/V2-1 firmware upgrade
- **X-CUBE-MEMS1**
 - Copy the .zip file content into a folder on your PC
 - The package contains source code examples (Keil, IAR, System Workbench) based on **NUCLEO-F401RE or NUCLEO-L053R8 or NUCLEO-L152RE or NUCLEO-L476RG**

X-CUBE-MEMS1 in 7 steps

Use of Unicleo-GUI with precompiled BIN FW

X-CUBE-MEMS1 for NUCLEO-F401RE or NUCLEO-L053R8 or NUCLEO-L152RE or NUCLEO-L476RG

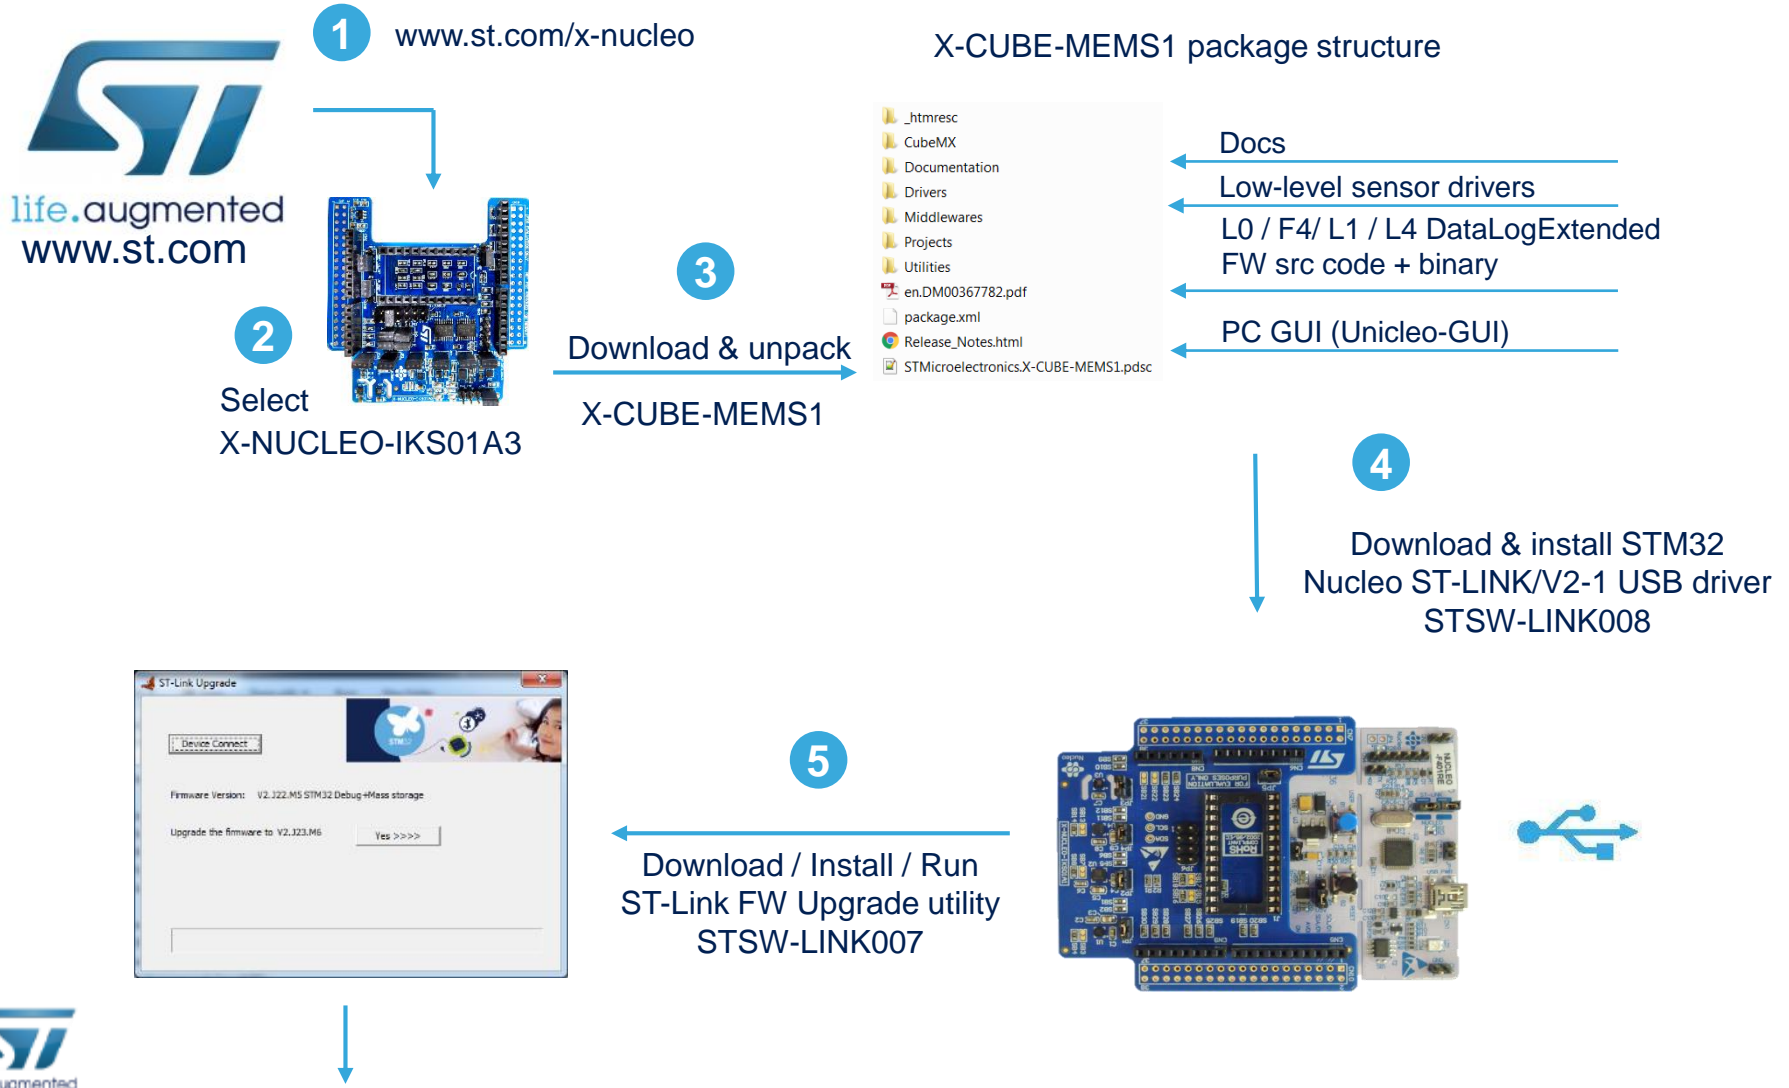

X-CUBE-MEMS1 in 7 steps

Use of Unicleo-GUI with precompiled BIN fmw



X-CUBE-MEMS1 for NUCLEO-F401RE or NUCLEO-L053R8 or NUCLEO-L152RE or NUCLEO-L476RG

\\STM32CubeExpansion_MEMS1_V6.0.0\Projects\STM32F401RE-Nucleo\Examples\IKS01A3\DataLogExtended\Binary
\\STM32CubeExpansion_MEMS1_V6.0.0\Projects\STM32L053R8-Nucleo\Examples\IKS01A3\DataLogExtended\Binary
\\STM32CubeExpansion_MEMS1_V6.0.0\Projects\STM32L152RE-Nucleo\Examples\IKS01A3\DataLogExtended\Binary
\\STM32CubeExpansion_MEMS1_V6.0.0\Projects\STM32L476RG-Nucleo\Examples\IKS01A3\DataLogExtended\Binary

Name	Ext	Size
[.]		<DIR>
DataLogExtended	bin	30,344

6

drag and drop
DataLogExtended.bin for F4 or for L0 or for L1
or for L4
on Nucleo drive

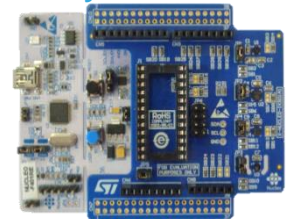
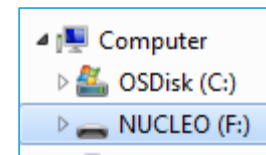


Open Utilities Folder in the X-CUBE-MEMS1 SW package

- _htmresc
- CubeMX
- Documentation
- Drivers
- Middlewares
- Projects
- Utilities
- en.DM00367782.pdf
- package.xml
- Release_Notes.html
- STMicroelectronicsX-CUBE-MEMS1.pdc

7

...and click on the link to download
and install Unicleo-GUI

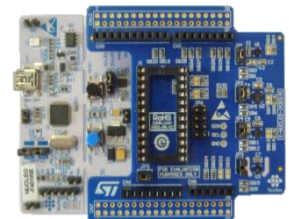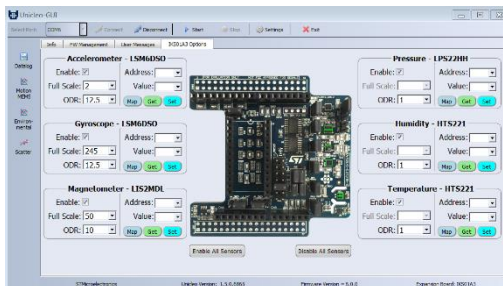

X-CUBE-MEMS1 Utilities – Unicleo-GUI

X-CUBE-MEMS1 for NUCLEO-F401RE, NUCLEO-L053R8, NUCLEO-L152RE or NUCLEO-L476RG

Select COM port **1**



Select sensors **2**





Select graph plots **3**



Start data logging **4**




Data Log Area **5**

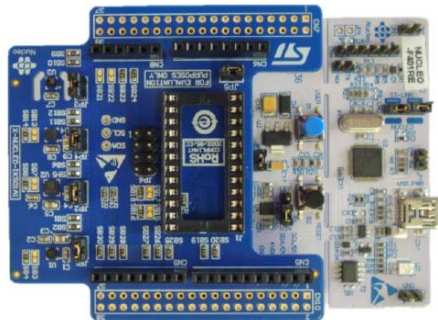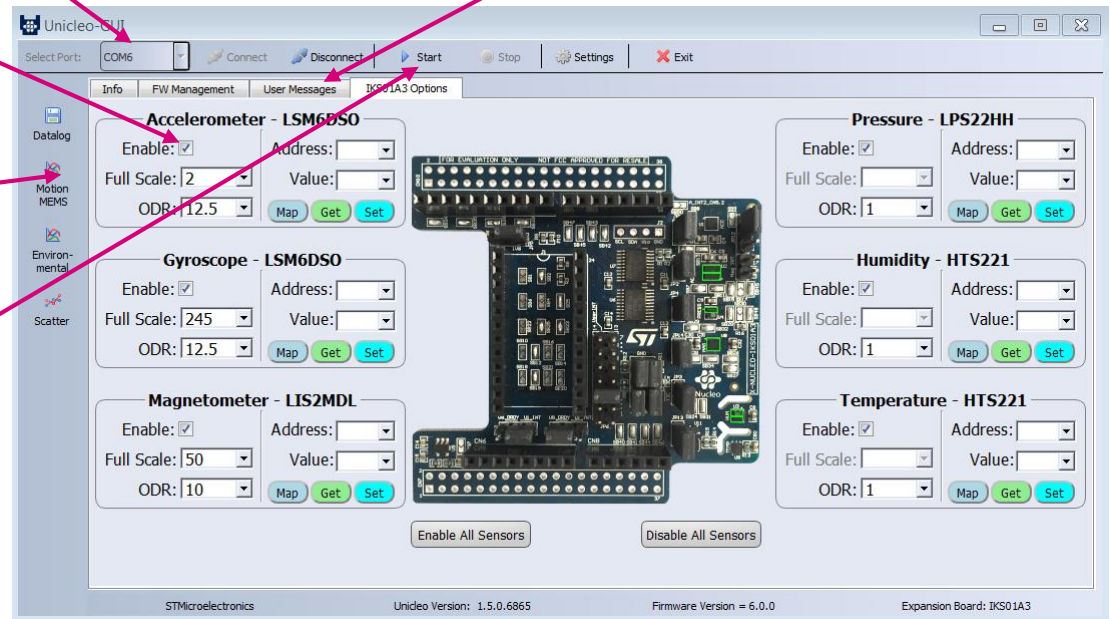


Unicleo-GUI

Compile the DataLogExtended FW using a supported IDE


X-CUBE-MEMS1 for NUCLEO-F401RE, NUCLEO-L053R8, NUCLEO-L152RE or NUCLEO-L476RG

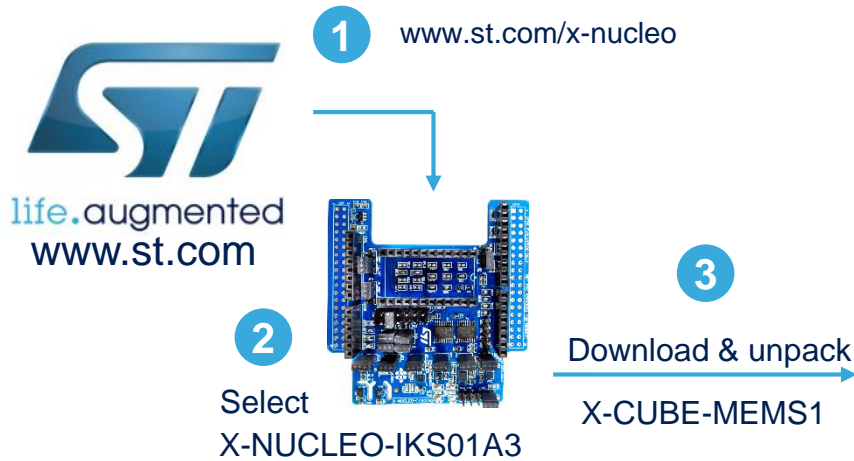


X-CUBE-MEMS1 package structure

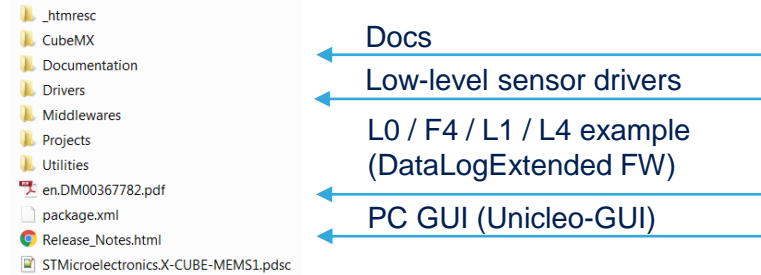

.\STM32CubeExpansion_MEMS1_V6.0.0\Projects\STM32F401RE-Nucleo\Examples\IKS01A3\DataLogExtended\EWARM

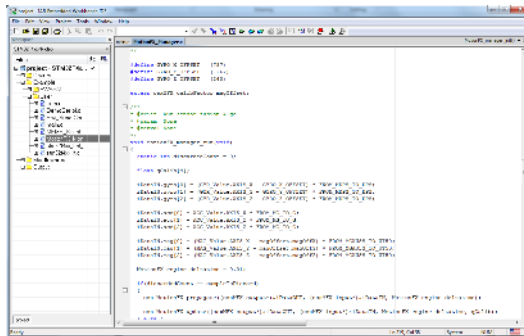





Flash and run the project.

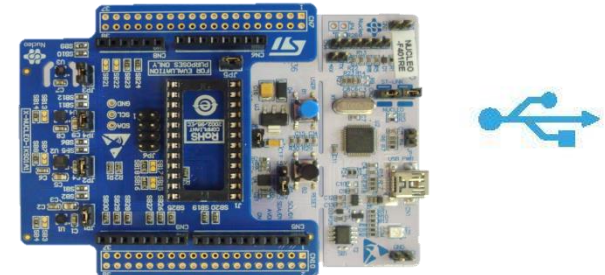

Using serial line monitor – e.g. TeraTerm

X-CUBE-MEMS1 for NUCLEO-F401RE, NUCLEO-L053R8, NUCLEO-L152RE or NUCLEO-L476RG

- Drag and drop DataLogTerminal.bin on Nucleo drive
- Configure the serial line monitor (speed, LF)

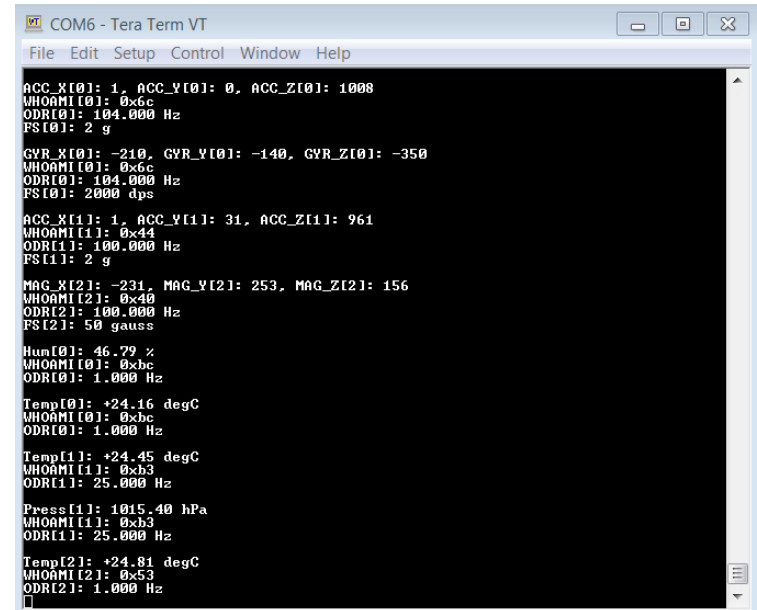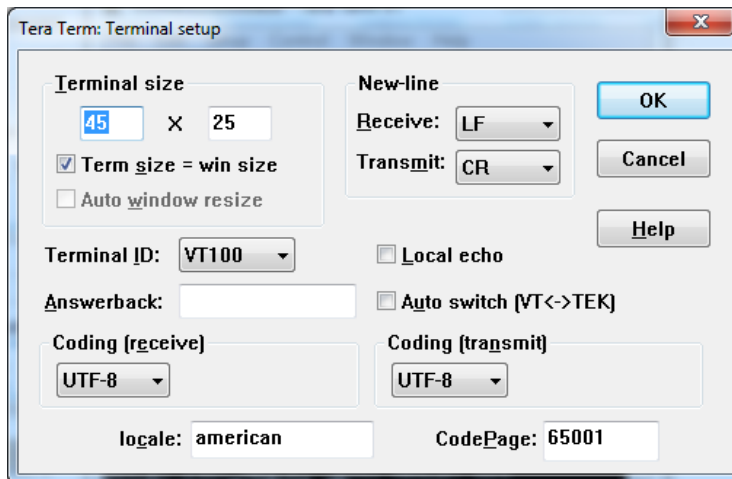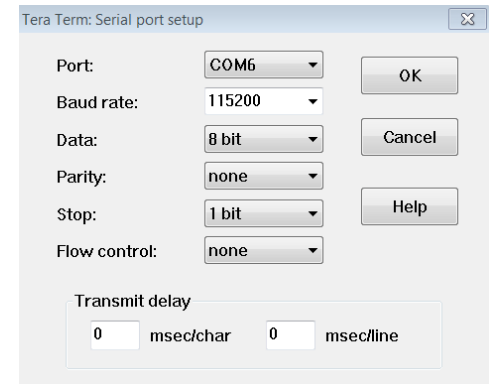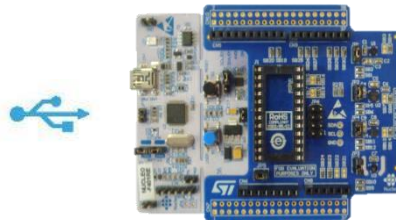

All documents are available in the DESIGN tab of the related products webpage


X-NUCLEO-IKS01A3:

- **Gerber files, BOM, Schematics**
- **DB3851:** Motion MEMS and environmental sensor expansion board for STM32 Nucleo – **Data brief**
- **UM2559:** Getting started with the X-NUCLEO-IKS01A3 motion MEMS and environmental sensor expansion board for STM32 Nucleo – **User manual**


X-CUBE-MEMS1:

- **DB2442:** Sensor and motion algorithm software expansion for STM32Cube – **Data brief**
- **UM1859:** Getting started with the X-CUBE-MEMS1 motion MEMS and environmental sensor software expansion for STM32Cube – **User manual**
- Software Setup File


Consult www.st.com for the complete list

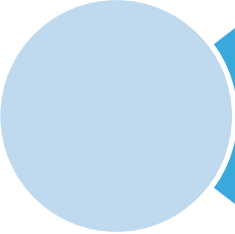

X-NUCLEO-IKS01A3: Motion MEMS and environmental sensor expansion board
Hardware and Software overview

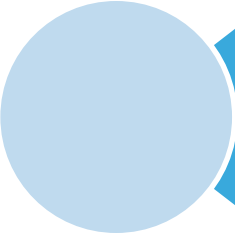

Setup & Demo Examples
Documents & Related Resources

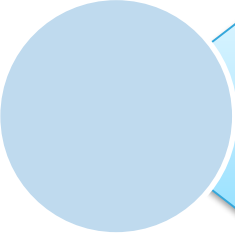


STM32 Open Development Environment: Overview

STM32 Open Development Environment


Fast, affordable Prototyping and Development

- The STM32 Open Development Environment (ODE) consists of a set of stackable boards and a modular open SW environment designed around the STM32 microcontroller family.

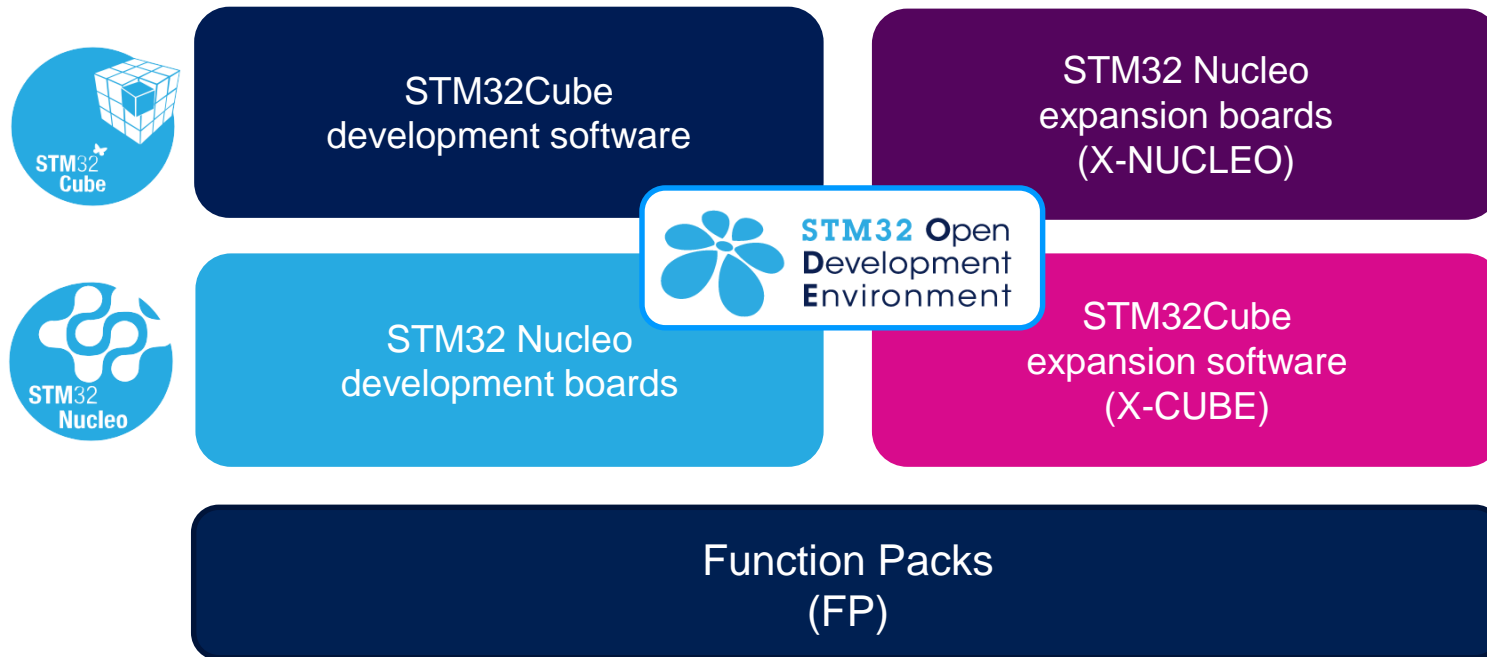


STM32 Nucleo Development Boards (NUCLEO)

- A comprehensive range of affordable development boards for all the STM32 microcontroller series, with unlimited unified expansion capabilities and integrated debugger/programmer functionality.

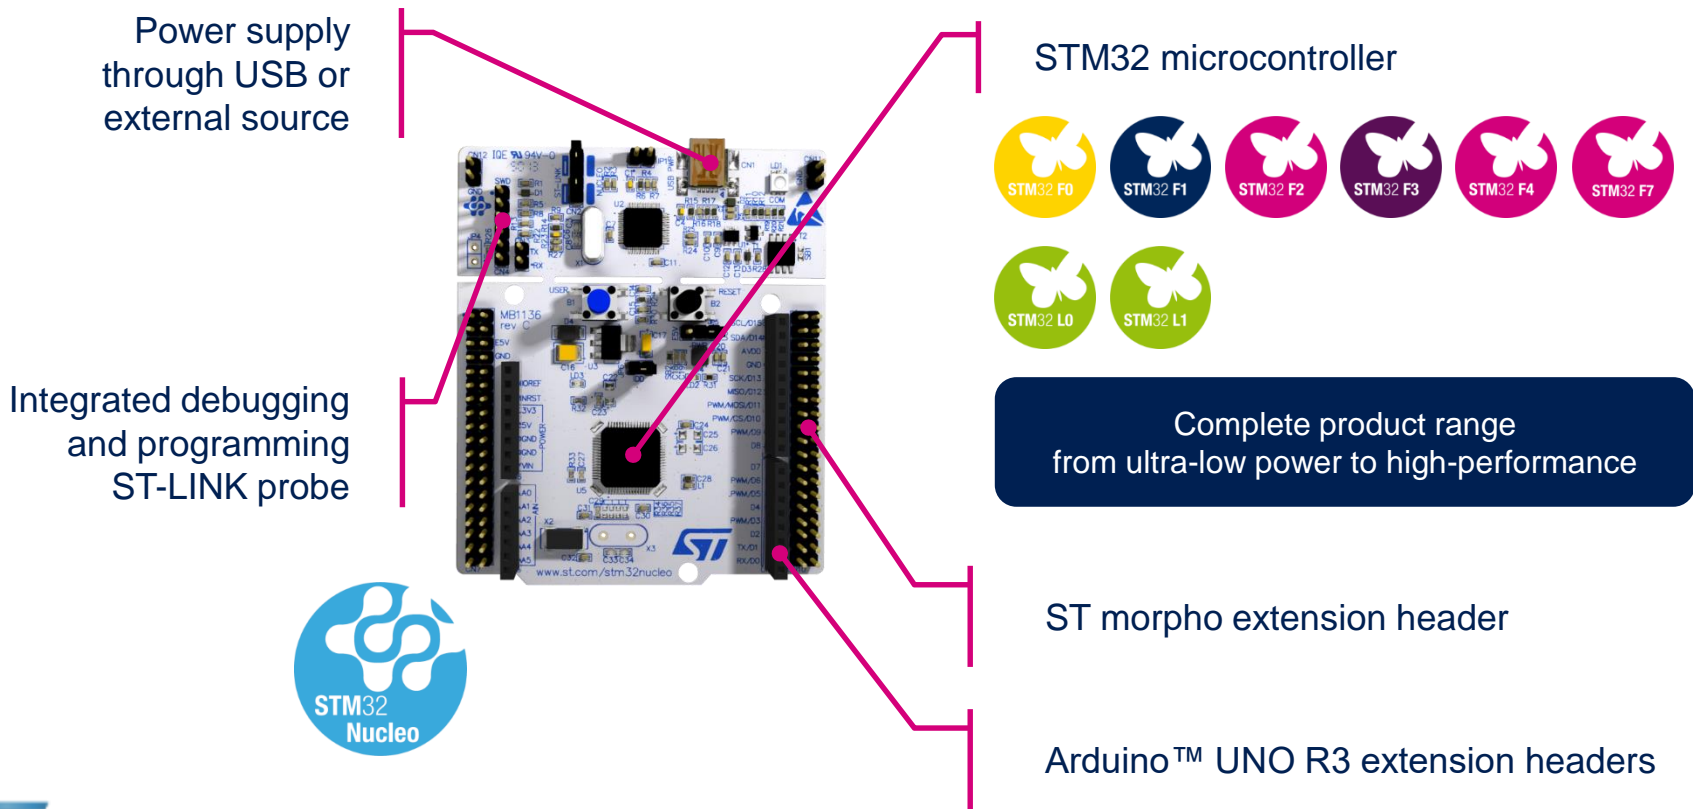

STM32 Nucleo Expansion Boards (X-NUCLEO)

- Boards with additional functionality that can be plugged directly on top of the STM32 Nucleo development board directly or stacked on another expansion board.

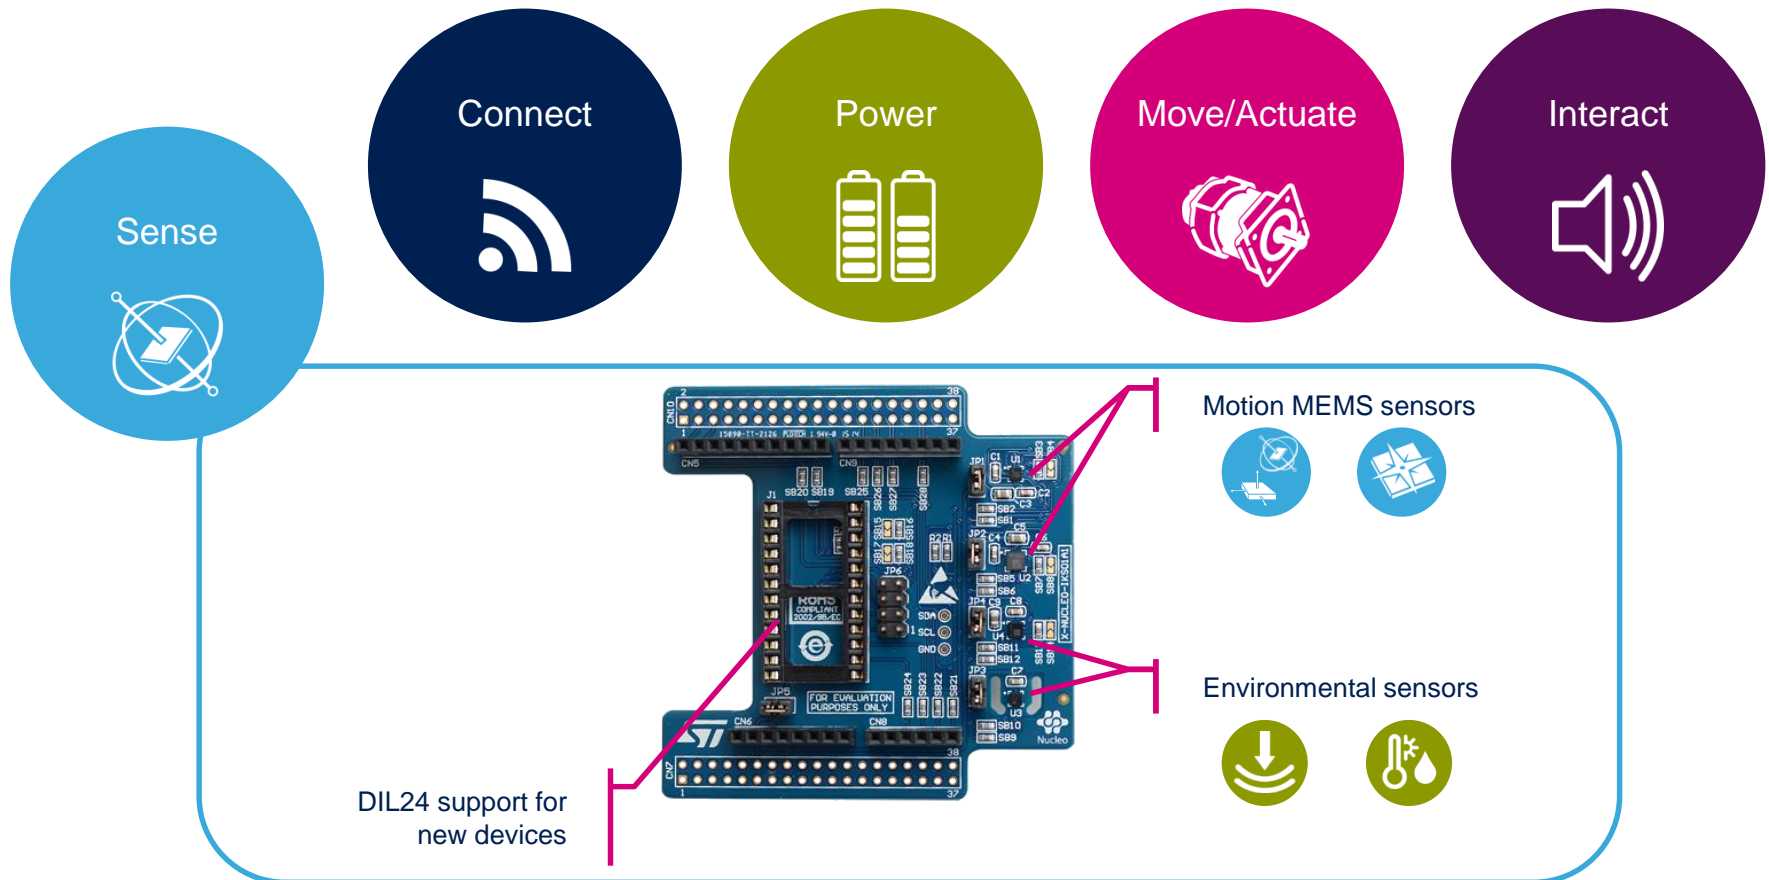


Example of STM32 expansion board (X-NUCLEO-IKS01A1)

STM32 Open Development Environment

Software components

19

- **STM32Cube software (CUBE)** - A set of free tools and embedded software bricks to enable fast and easy development on the STM32, including a Hardware Abstraction Layer and middleware bricks.
- **STM32Cube expansion software (X-CUBE)** - Expansion software provided free for use with the STM32 Nucleo expansion board and fully compatible with the STM32Cube software framework. It provides abstracted access to expansion board functionality through high-level APIs and sample applications.

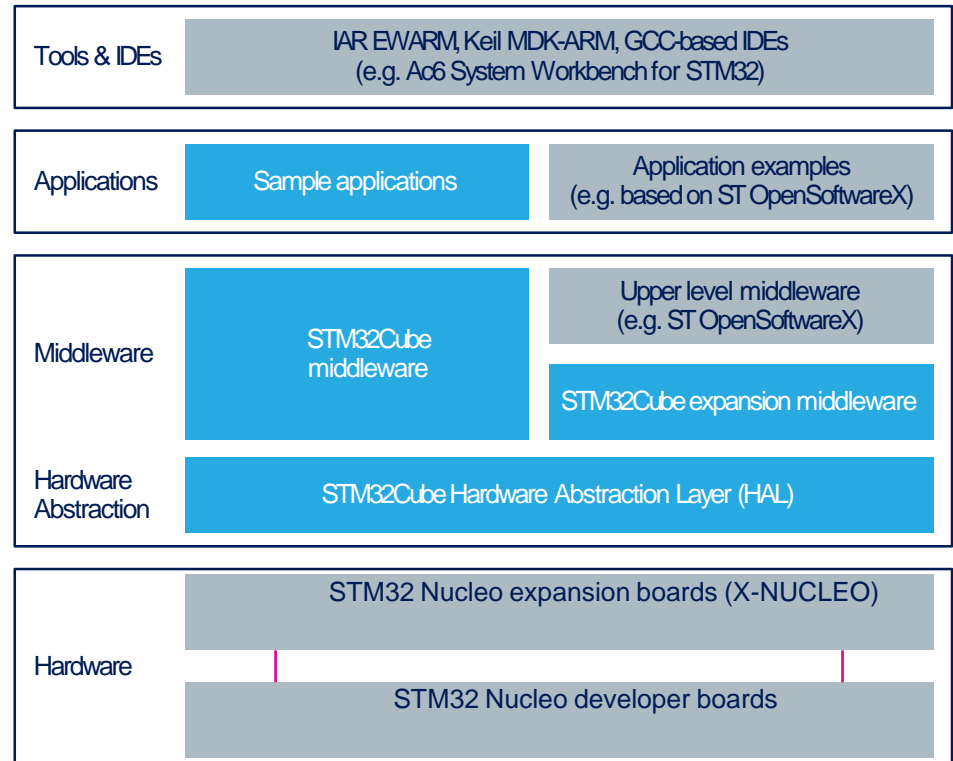

- **Compatibility with multiple Development Environments** - The STM32 Open Development Environment is compatible with a number of IDEs including IAR EWARM, Keil MDK, and GCC-based environments. Users can choose from three IDEs from leading vendors, which are free of charge and deployed in close cooperation with ST. These include Eclipse-based IDEs such as Ac6 System Workbench for STM32 and the MDK-ARM environment.





OPEN LICENSE MODELS: STM32Cube software and sample applications are covered by a mix of fully open source BSD license and ST licenses with very permissive terms.

www.st.com/stm32cube

www.st.com/x-cube

STM32 Open Development Environment

Building block approach

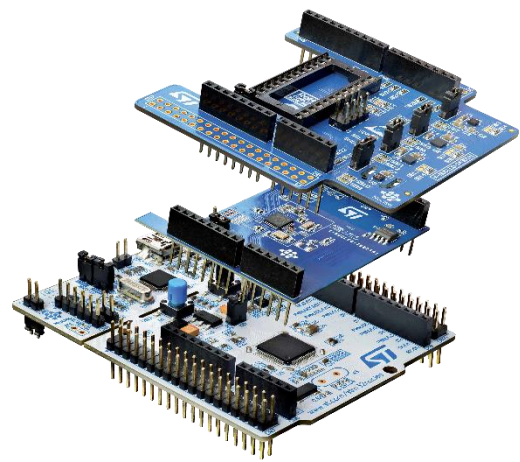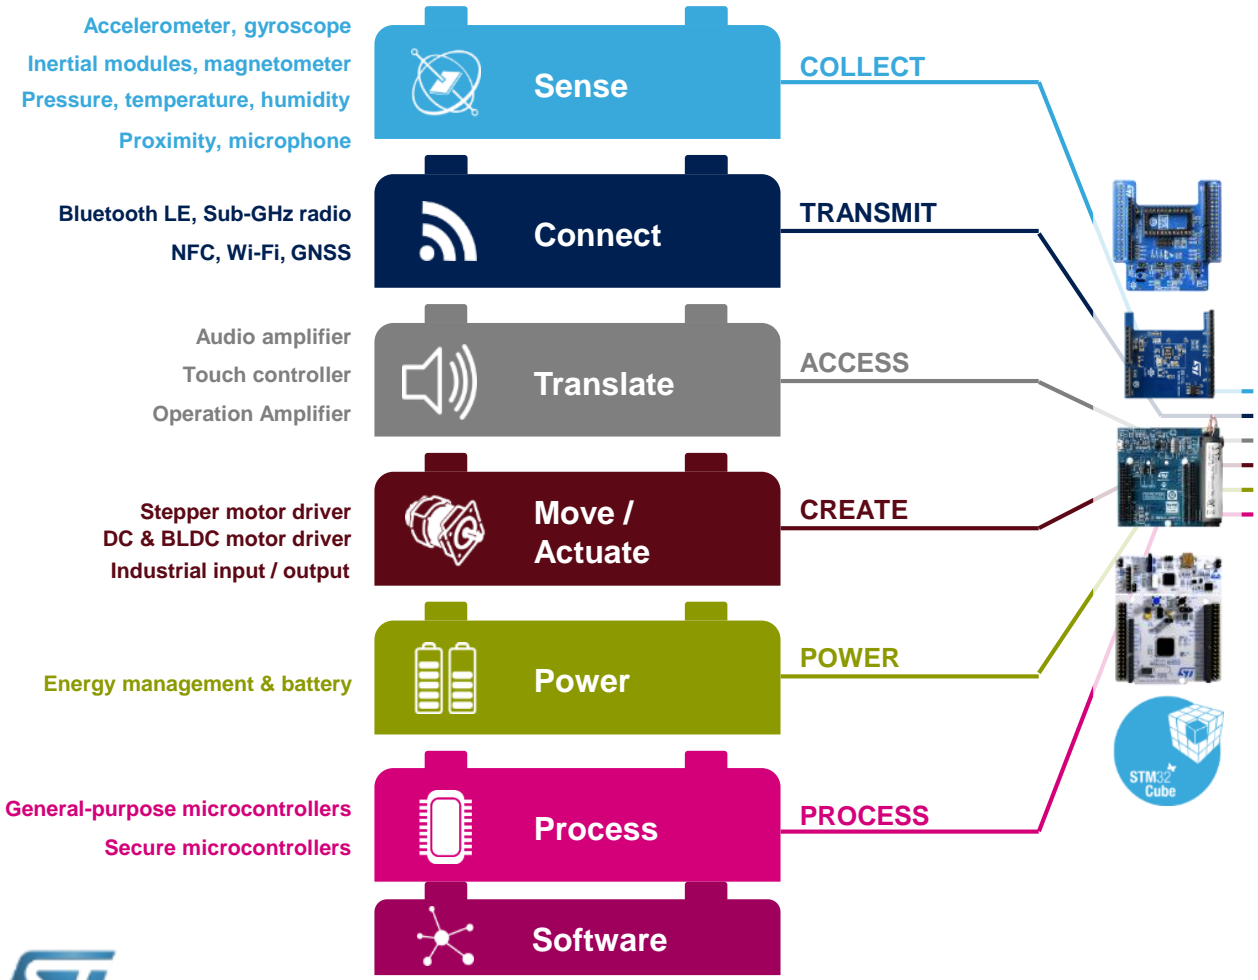

www.st.com/stm32code

